


INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL SURFACE MOUNT

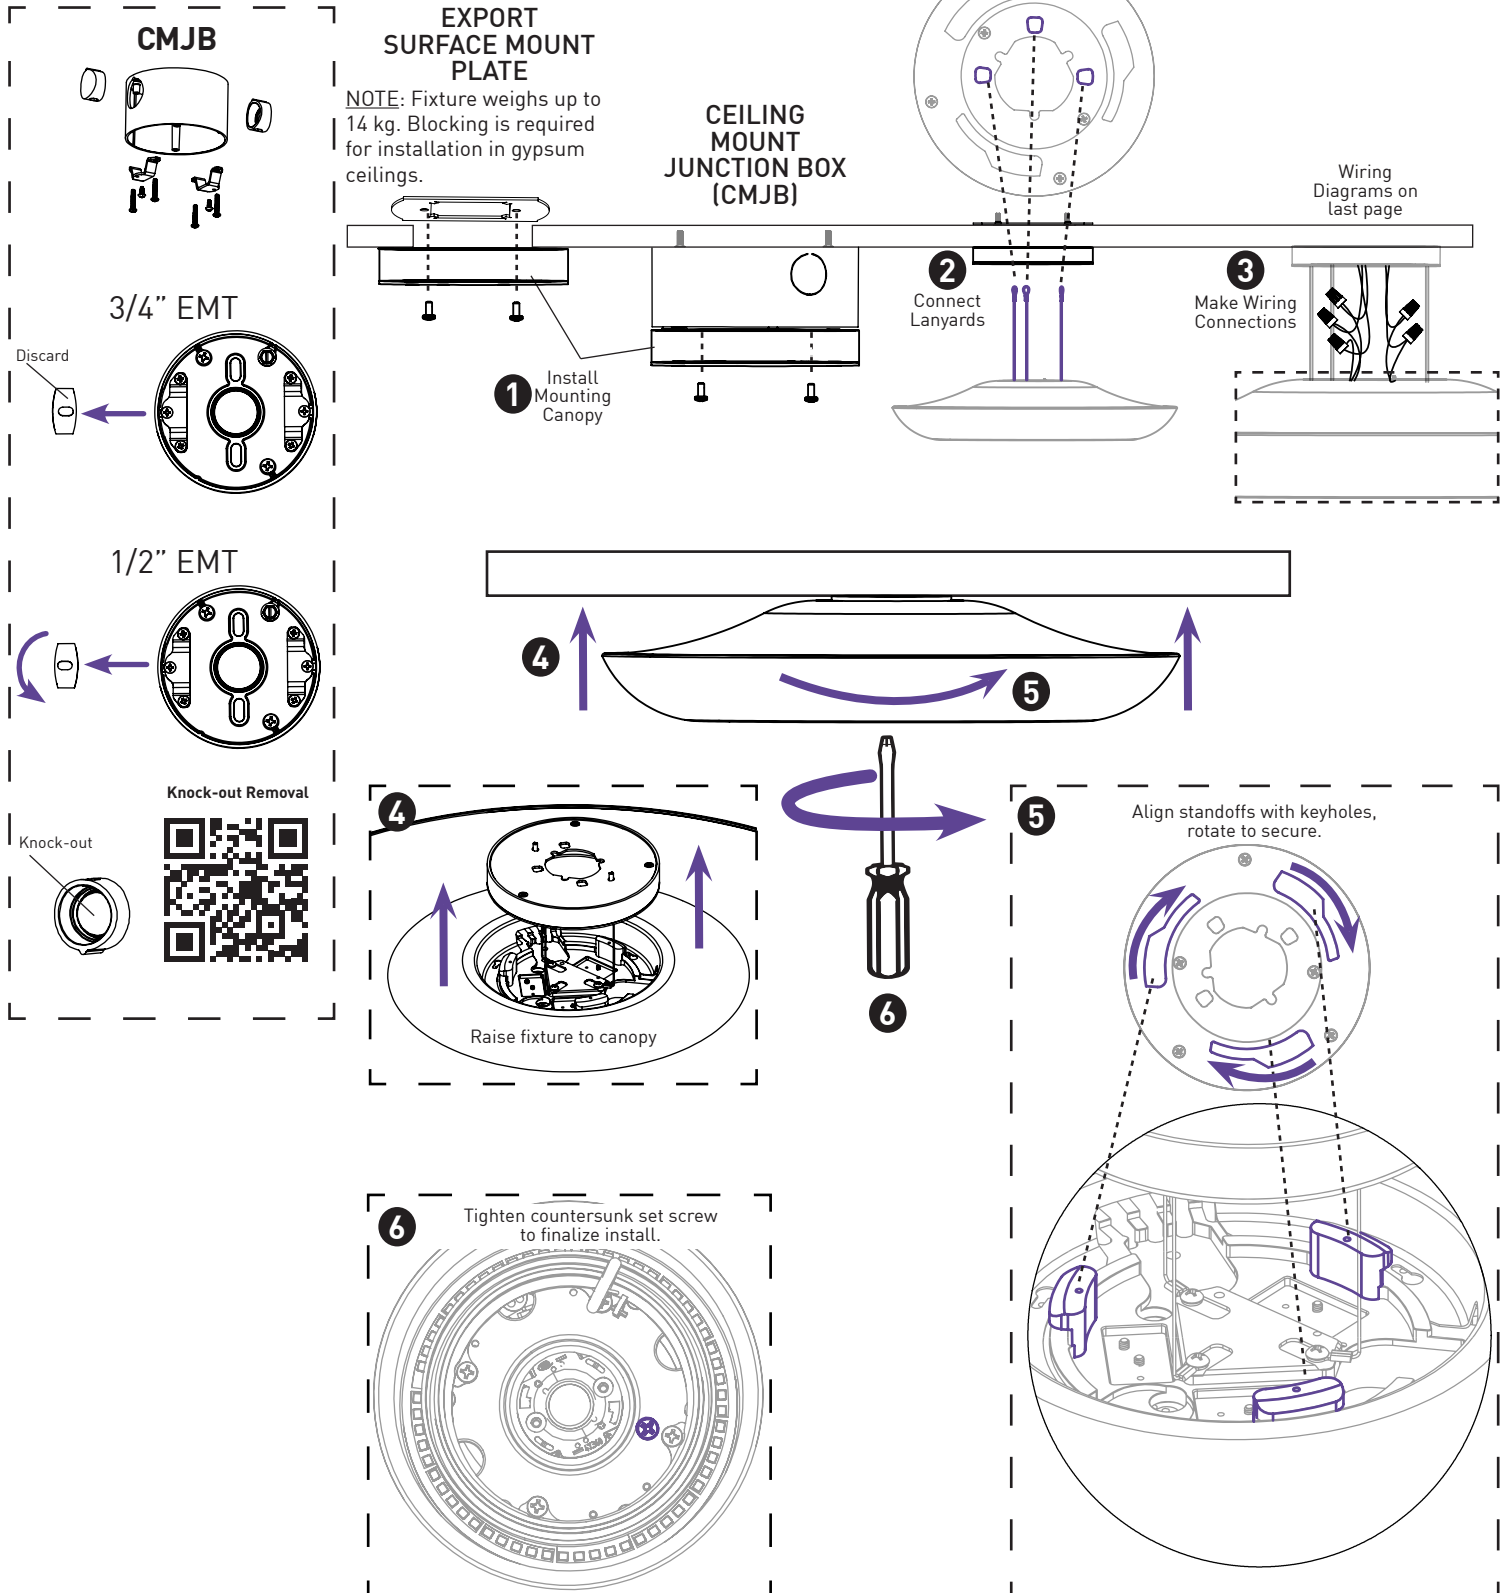


FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.

INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL STEM MOUNT



STEM ASSEMBLY

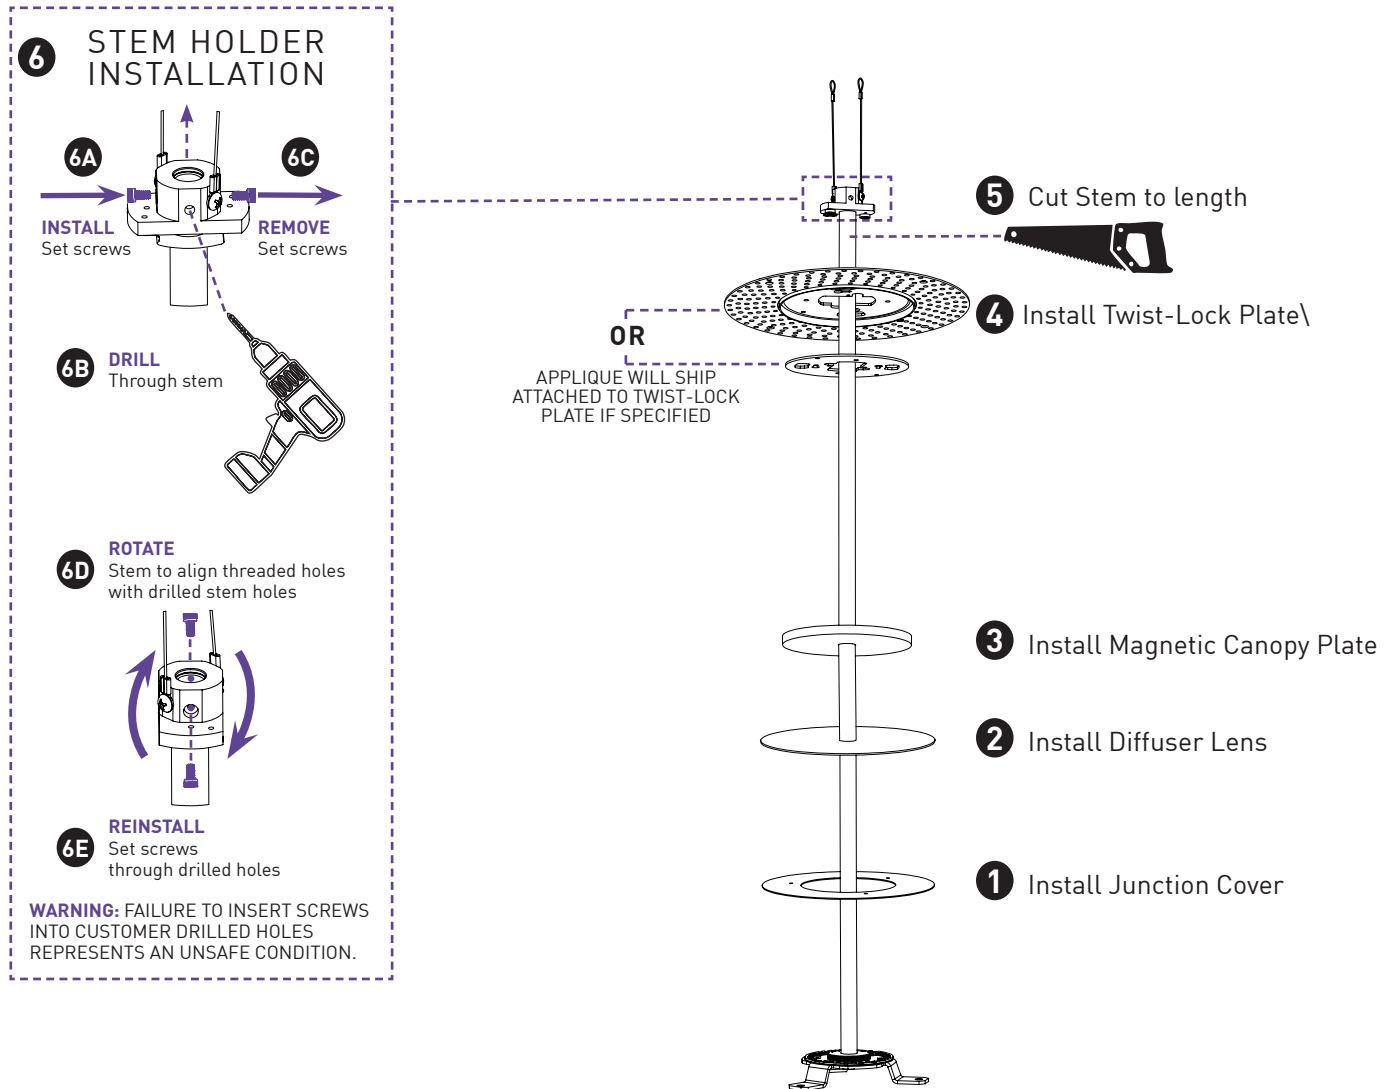


FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.

INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL STEM MOUNT



STEM INSTALLATION

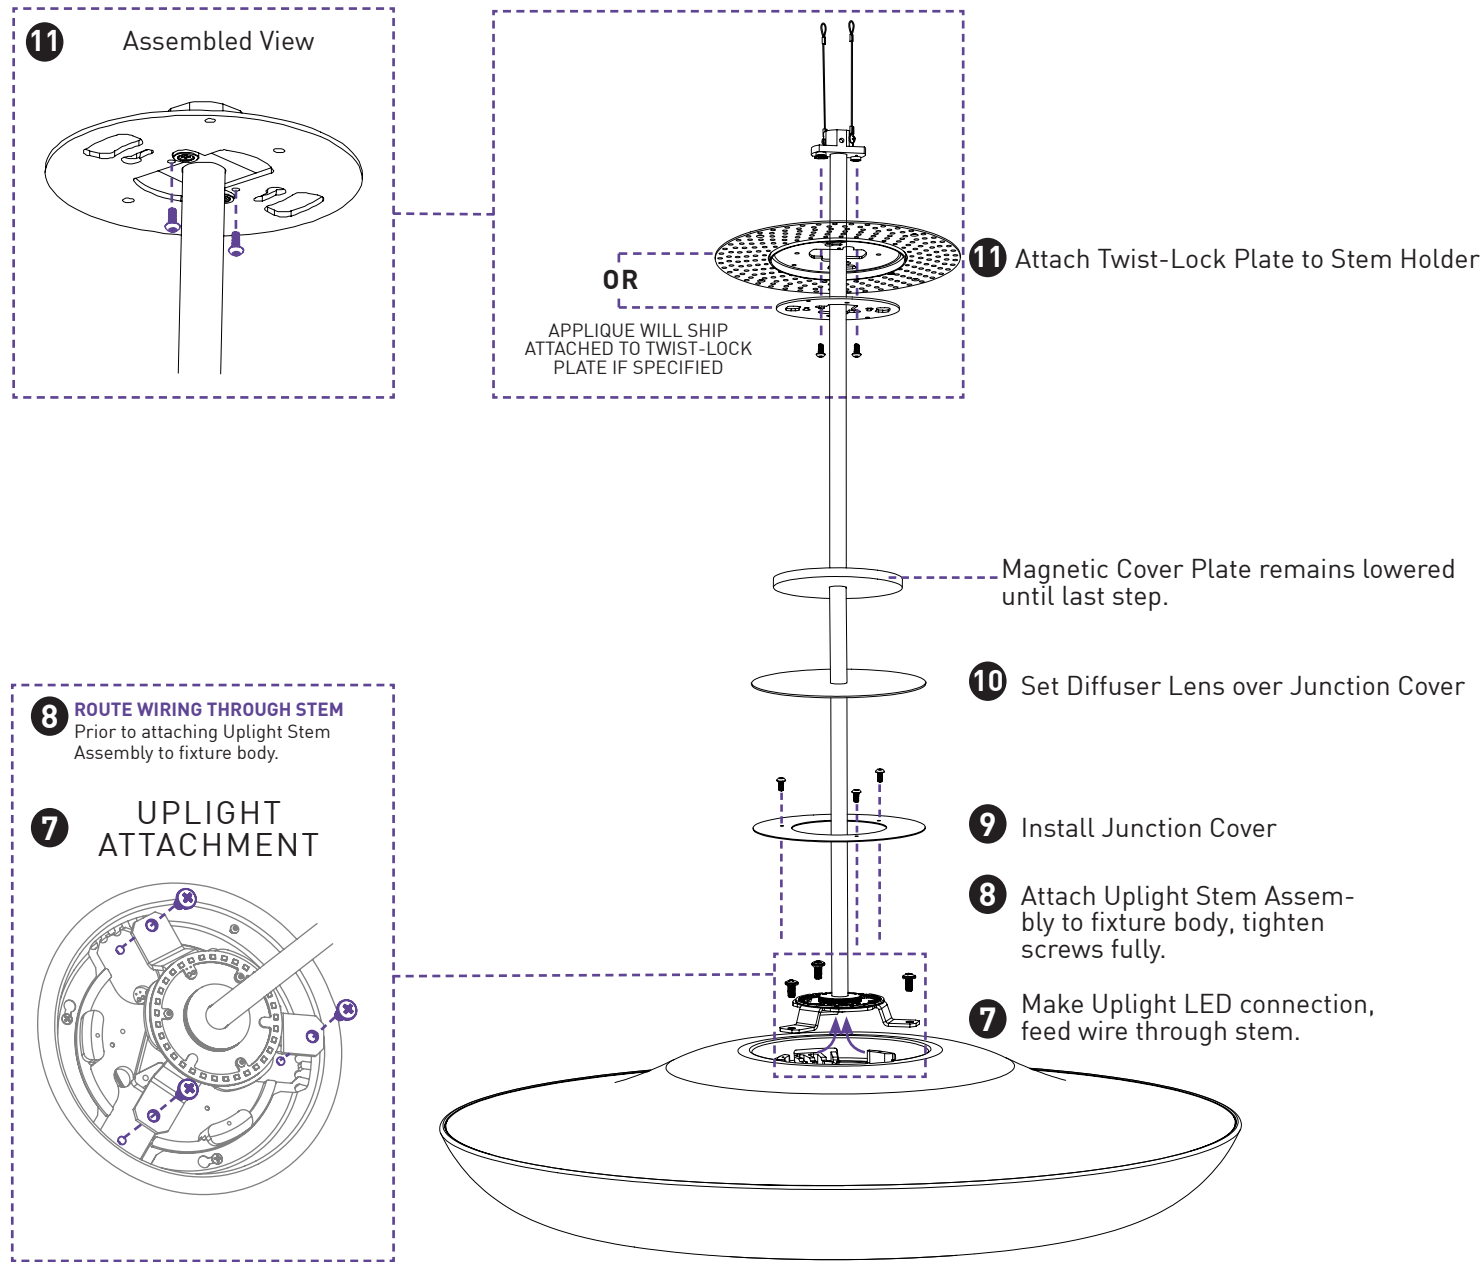

FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.


INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL

STEM MOUNT




STEM FIXTURE INSTALLATION

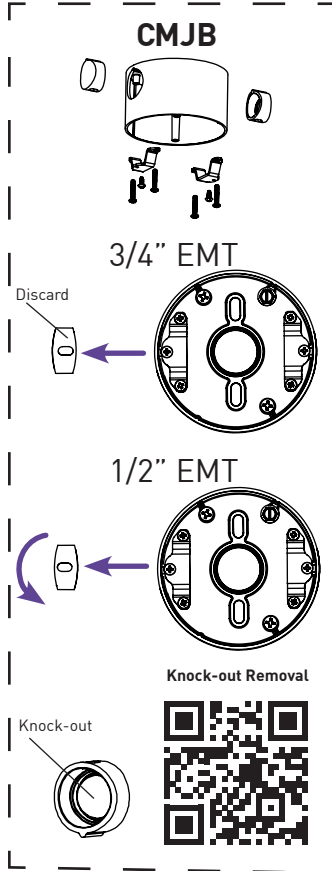


EXPORT SURFACE MOUNT PLATE

NOTE: Fixture weighs up to 14 kg. Blocking is required for installation in gypsum ceilings.

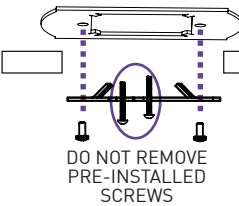


12 Install Mounting Plate

CEILING MOUNT JUNCTION BOX (CMJB)

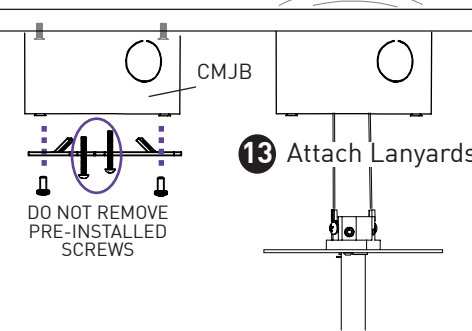


13 Attach Lanyards

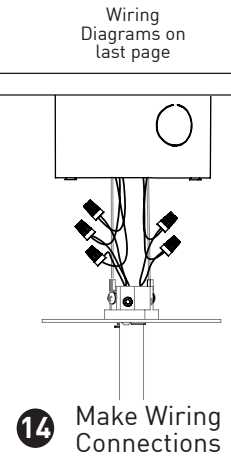


14 Make Wiring Connections

15 Lift fixture assembly, align keyholes slots of Twist-lock plate with screws of Mounting Plate, then twist to engage.

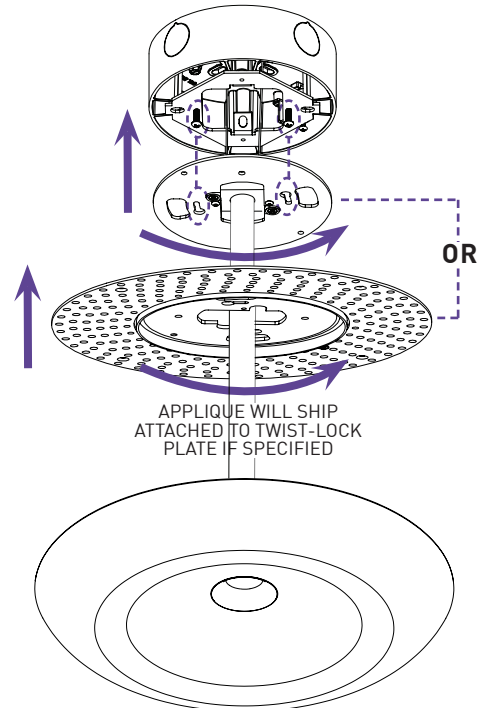


SURFACE MOUNT

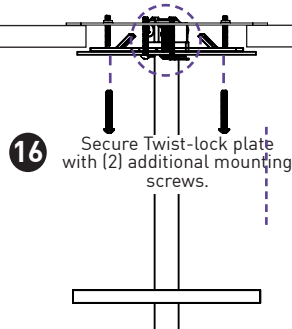


16

CMJB

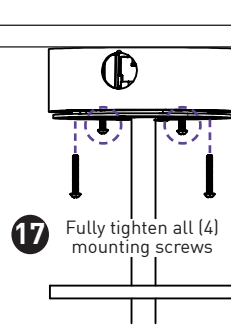

17

ZERO-SIGHTLINE

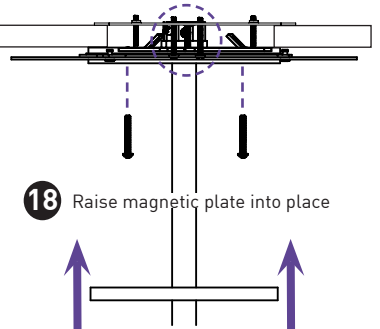


18

*Steps 15-18 apply to all mounting types (JBMP, CMJB, and ZERO-SIGHTLINE)


FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.

INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL CLEANING INSTRUCTIONS

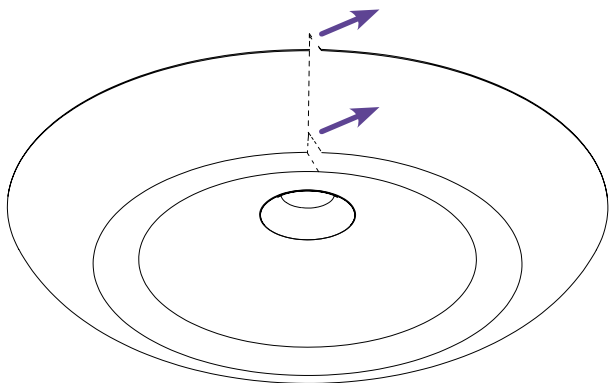

- 1 After final cleaning of the space, remove protective film from waveguide. Avoid touching waveguide with hands.

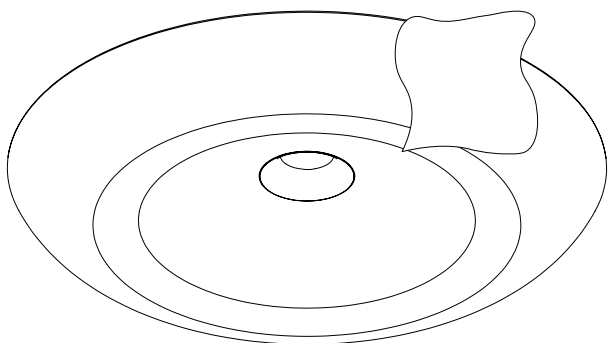

- 2 Factory recommends cleaning waveguide assembly with a microfiber cloth or similar non-abrasive cloth. In most cases a damp microfiber cloth will remove dust/debris or fingerprints. For stubborn stains, approved cleaning agents include soap and water. Consult factory for other cleaning agents

FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.

INSTALLATION INSTRUCTIONS

STELLARIS INTERNATIONAL


WIRING DIAGRAMS



WIRING NOTES:

IMPORTANT: The only connections required to be made are line voltage and control input as applied. Fixtures and LEDs are pre-wired to specification.

- Each LED source is provided with a separate driver.
- 0-10V drivers feature dim-to-off functionality. 0-10V drivers must be powered continuously, do not toggle power off.
- LED sources can be controlled independently or together. 0-10V drivers require separate control legs for independent control.

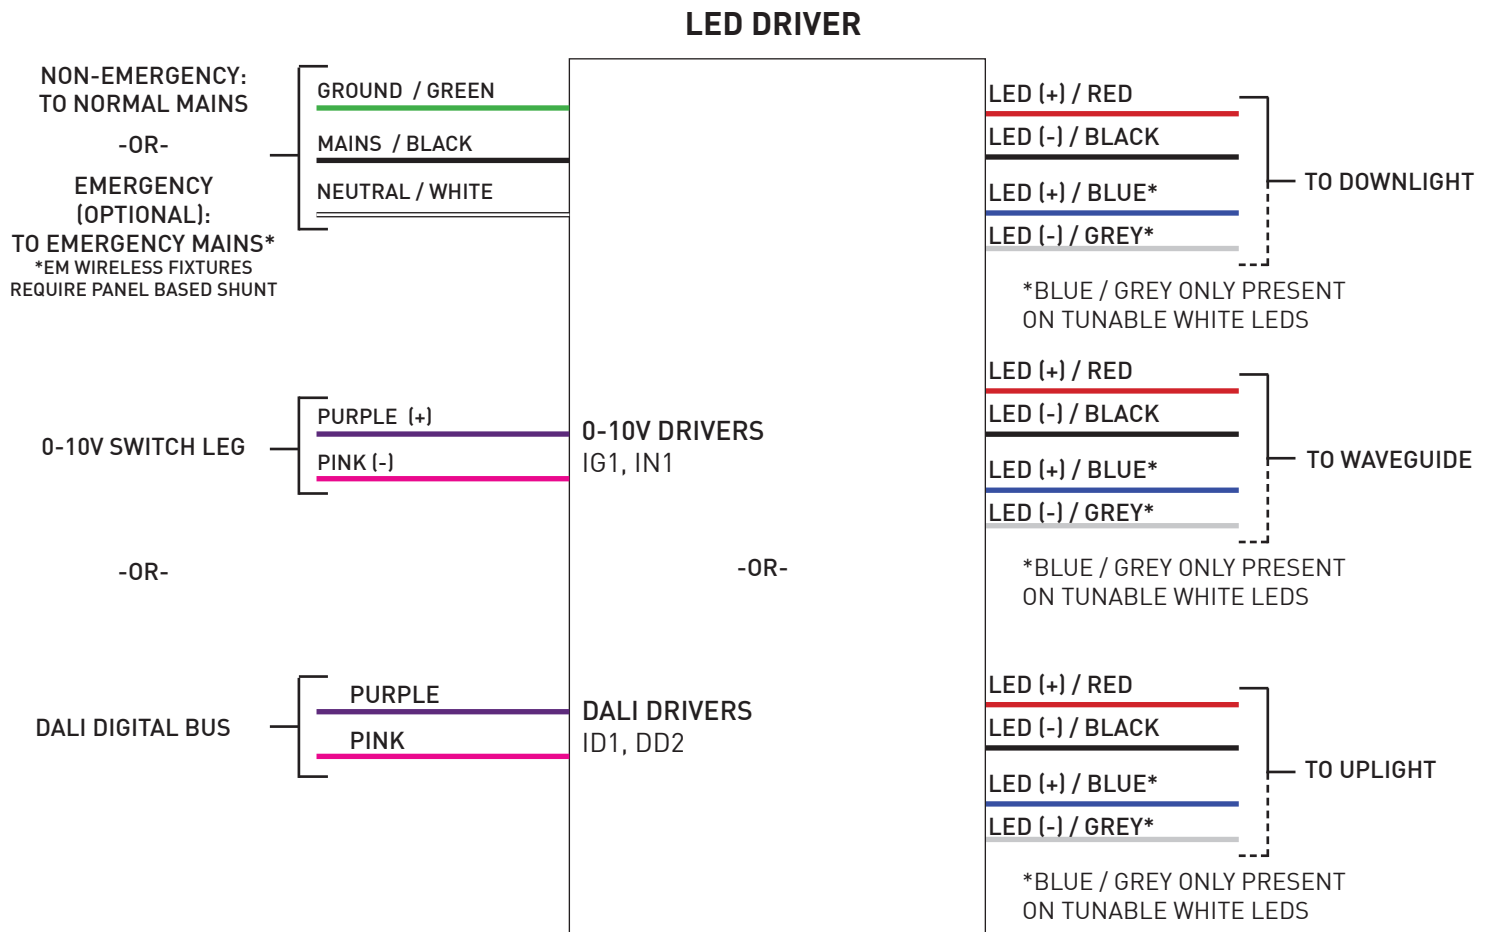

FOR FULL WARRANTY INFORMATION AND COMPREHENSIVE INSTALLATION GUIDE, PLEASE VISIT WWW.LUCIFERLIGHTING.COM.